


COVENTRY® WALL CORNER UNIT

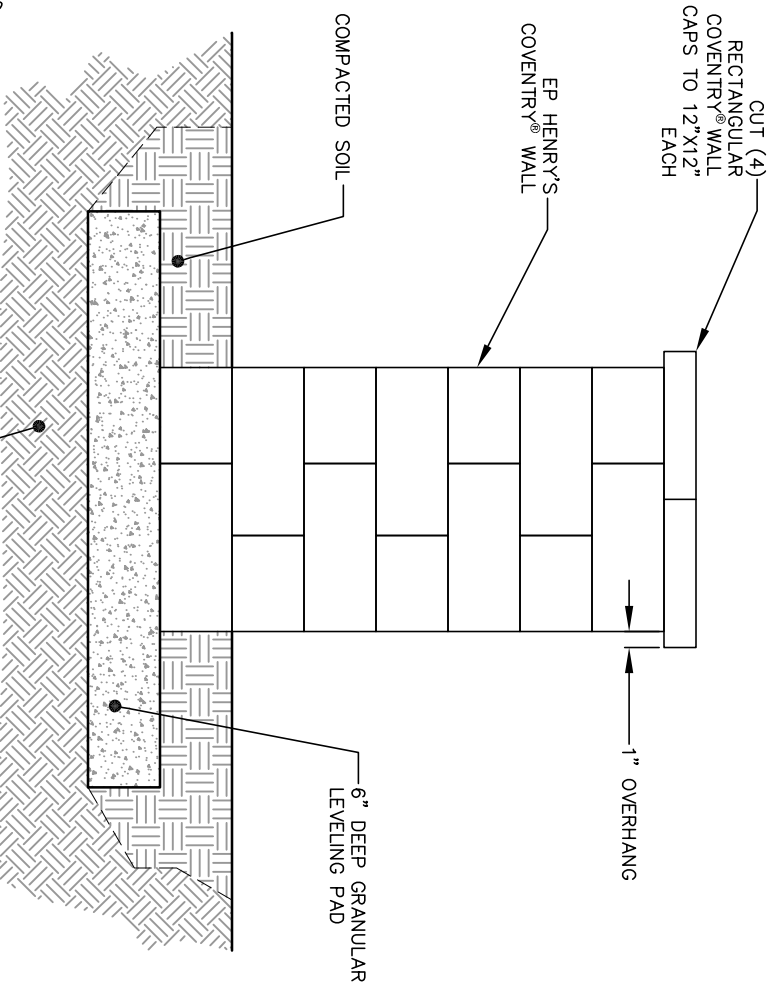

- COLUMN NOTES:
1. FILL CENTER HOLE WITH DGA STONE, CLEAN STONE OR WEAK CONCRETE.
  2. USE TWO BEADS OF CONCRETE ADHESIVE ON EACH COURSE.
  3. LEVELING PAD SHOULD BE CONSTRUCTED WITH A GRADED AGGREGATE (SELECT FILL) MATERIAL (I.E. 2A STONE OR CRUSHER RUN).
  4. MAXIMUM UNREINFORCED COLUMN HEIGHT=4 FT.
  5. CONSTRUCT COLUMN CAP TO ACHIEVE 1" OVERHANG
  6. NOT INTENDED FOR GATE SUPPORT, CONSULT AN ENGINEER FOR GATE APPLICATIONS.

TITLE:

EP HENRY 6" COVENTRY® WALL COLUMN DETAIL

SCALE:

NOT TO SCALE

**EP HENRY**  
EXCELLENCE SINCE 1903

201 Park Ave.  
P.O. Box 615  
Woodbury, NJ 08096  
(856)-845-6200  
(856)-845-0023