
BACK BLOCK OF STEPS. FILL AND COMPACT EXCAVATED FOOTER AREA BEHIND STEPS W/DGA STONE AS STEPS ARE BUILT. CORE FILL BLOCK AND ALL VOIDS WITH DGA STONE OR CLEAN STONE (#57). USE HIGH STRENGTH CONCRETE ADHESIVE BETWEEN ALL BLOCK AND CAP UNITS. FOOTER:
FOR STEPS BEING BUILT AS PART OF A WALL OR INTO AN EXISTING GRADE, FOOTER SHOULD EXTEND 1' PAST

IF FILLER BLOCKS ARE OMITTED, AN ADDITIONAL COURSE OF BLOCK IS REQUIRED BENEATH BASE ROW SO EACH RISER IS SUPPORTED BY AT LEAST ONE BLOCK UNDERNEATH IT.

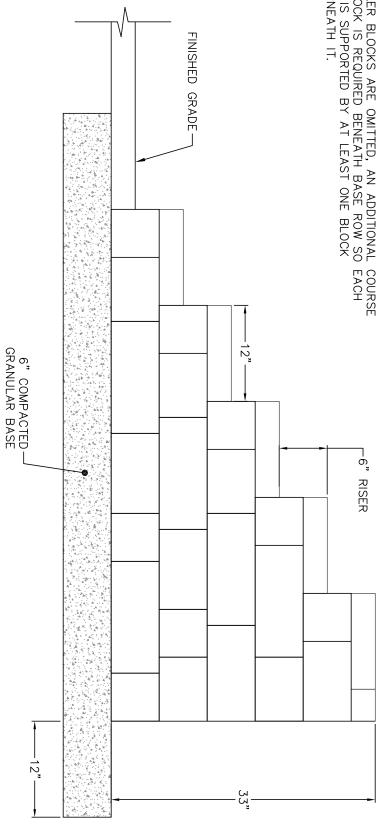

NO OVERHANG STEP DETAIL



Woodbury, NJ 08096 (856)-845-6200 P.O. Box 615 201 Park Ave. (856)-845-0023

TITLE:

F HENRY COVENTRY® WALL STEP DETAIL NO OVERHANG

SCALE:

NOT TO SCALE