


NOTES:

1. COMPACTED BACKFILL SHALL BE LEVEL WITH THE TOP OF THE WALL PRIOR TO GEOGRID PLACEMENT.
2. TYPICALLY GEOGRID IS PLACED WITHIN 1" OF THE FRONT FACE OF CAST STONE WALL UNIT.
3. GEOGRID SHALL LAY FLAT ON THE WALL UNIT AND COMPACTED BACKFILL SOILS BEHIND WALL UNIT.
4. PLACE THE NEXT COURSE OF WALL UNITS AND CORE FILL WITH #57 CLEAN STONE MEETING THE FOLLOWING GRADATION:

SIEVE SIZE: % PASSING:

1"	100 - 95
1/2"	100 - 25
No.4	0 - 10
No.8	0 - 5

5. PULL GEOGRID TAUT TO REMOVE SLACK AND WRINKLES.
6. STAKE AS REQUIRED TO KEEP GEOGRID TAUT DURING BACKFILL PLACEMENT.

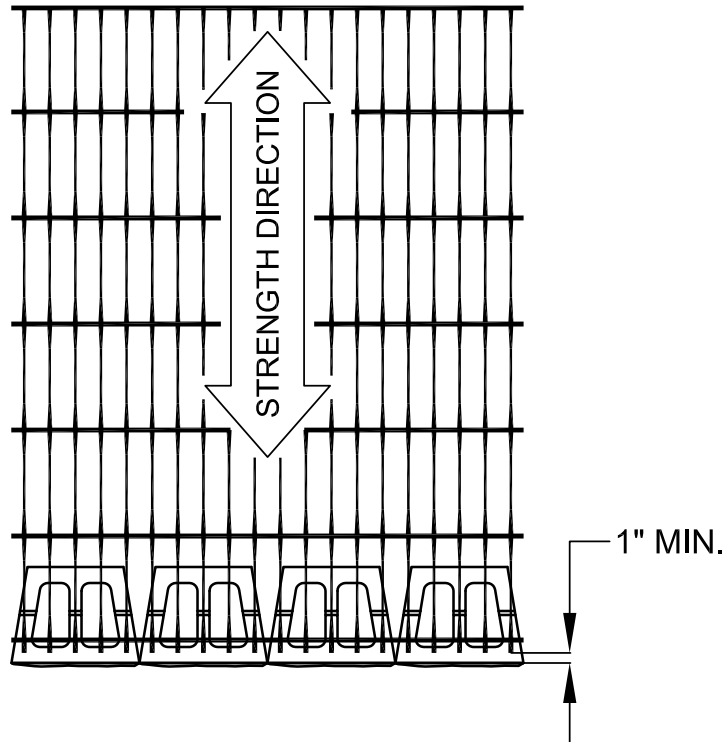

201 Park Ave.
Woodbury, NJ 08096
(800)-444-3679
www.ephenry.com

TITLE: CAST STONE WALL
TYPICAL GEOGRID PLACEMENT DETAIL

SCALE: NOT TO SCALE