


COURSE 2

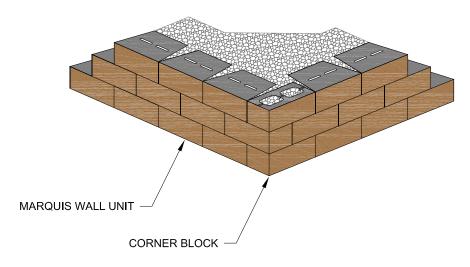

## COURSE 3

## NOTES:

- 1. HIGH STRENGTH CONCRETE ADHESIVE SHALL BE USED BETWEEN CORNER UNITS ON EACH SUCCESSIVE COURSE BEGINNING AT THE TOP OF THE BASE UNITS.
- 2. CORNER UNITS MAY BE SHIMMED TO LEVEL CORNER UNITS WITH THE COURSE OF BLOCK.



201 Park Ave. Woodbury, NJ 08096 (800)-444-3679 www.ephenry.com TITLE:

MARQUIS WALL CORNER INSTALLATION DETAIL

SCALE:

NOT TO SCALE