


**NOTES:**

1. COMPACTED BACKFILL SHALL BE LEVEL WITH THE TOP OF THE WALL PRIOR TO GEOGRID PLACEMENT.
2. TYPICALLY GEOGRID IS PLACED WITHIN 1" OF THE FRONT FACE OF MARQUIS WALL UNIT.
3. GEOGRID SHALL LAY FLAT ON THE WALL UNIT AND COMPACTED BACKFILL SOILS BEHIND WALL UNIT.
4. PLACE THE NEXT COURSE OF WALL UNITS. BACKFILL FOR DRAINAGE WITH #57 CLEAN STONE MEETING THE FOLLOWING GRADATION:

**SIEVE SIZE: % PASSING:**

1"	100 - 95
1/2"	100 - 25
No.4	0 - 10
No.8	0 - 5

5. PULL GEOGRID TAUT TO REMOVE SLACK AND WRINKLES.
6. STAKE AS REQUIRED TO KEEP GEOGRID TAUT DURING BACKFILL PLACEMENT.

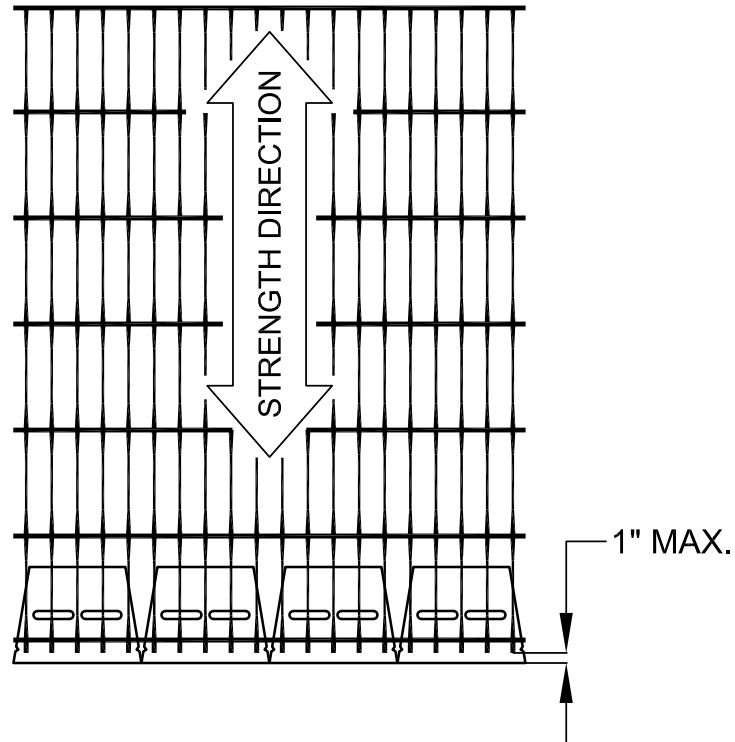

201 Park Ave.  
Woodbury, NJ 08096  
(800)-444-3679  
www.ephenry.com

TITLE: MARQUIS WALL  
TYPICAL GEOGRID PLACEMENT DETAIL

SCALE: NOT TO SCALE