


NOTES:

1. INSTALL GEOGRID IN ACCORDANCE WITH MANUFACTURER'S RECOMMENDATION AND CONSTRUCTION DRAWINGS.
2. 'H' IS WALL HEIGHT.
3. DRAINAGE ZONE SHALL BE BACKFILLED WITH #57 STONE MEETING THE FOLLOWING GRADATION:

SIEVE SIZE: % PASSING:

1"	100 - 95
1/2"	100 - 25
No.4	0 - 10
No.8	0 - 5

4. HIGH STRENGTH CONCRETE ADHESIVE SHALL BE USED BETWEEN CORNER UNITS ON EACH SUCCESSIVE COURSE BEGINNING AT THE TOP OF THE BASE UNITS.
5. CORNER UNITS MAY BE SHIMMED TO LEVEL CORNER UNITS WITH THE COURSE OF BLOCK.

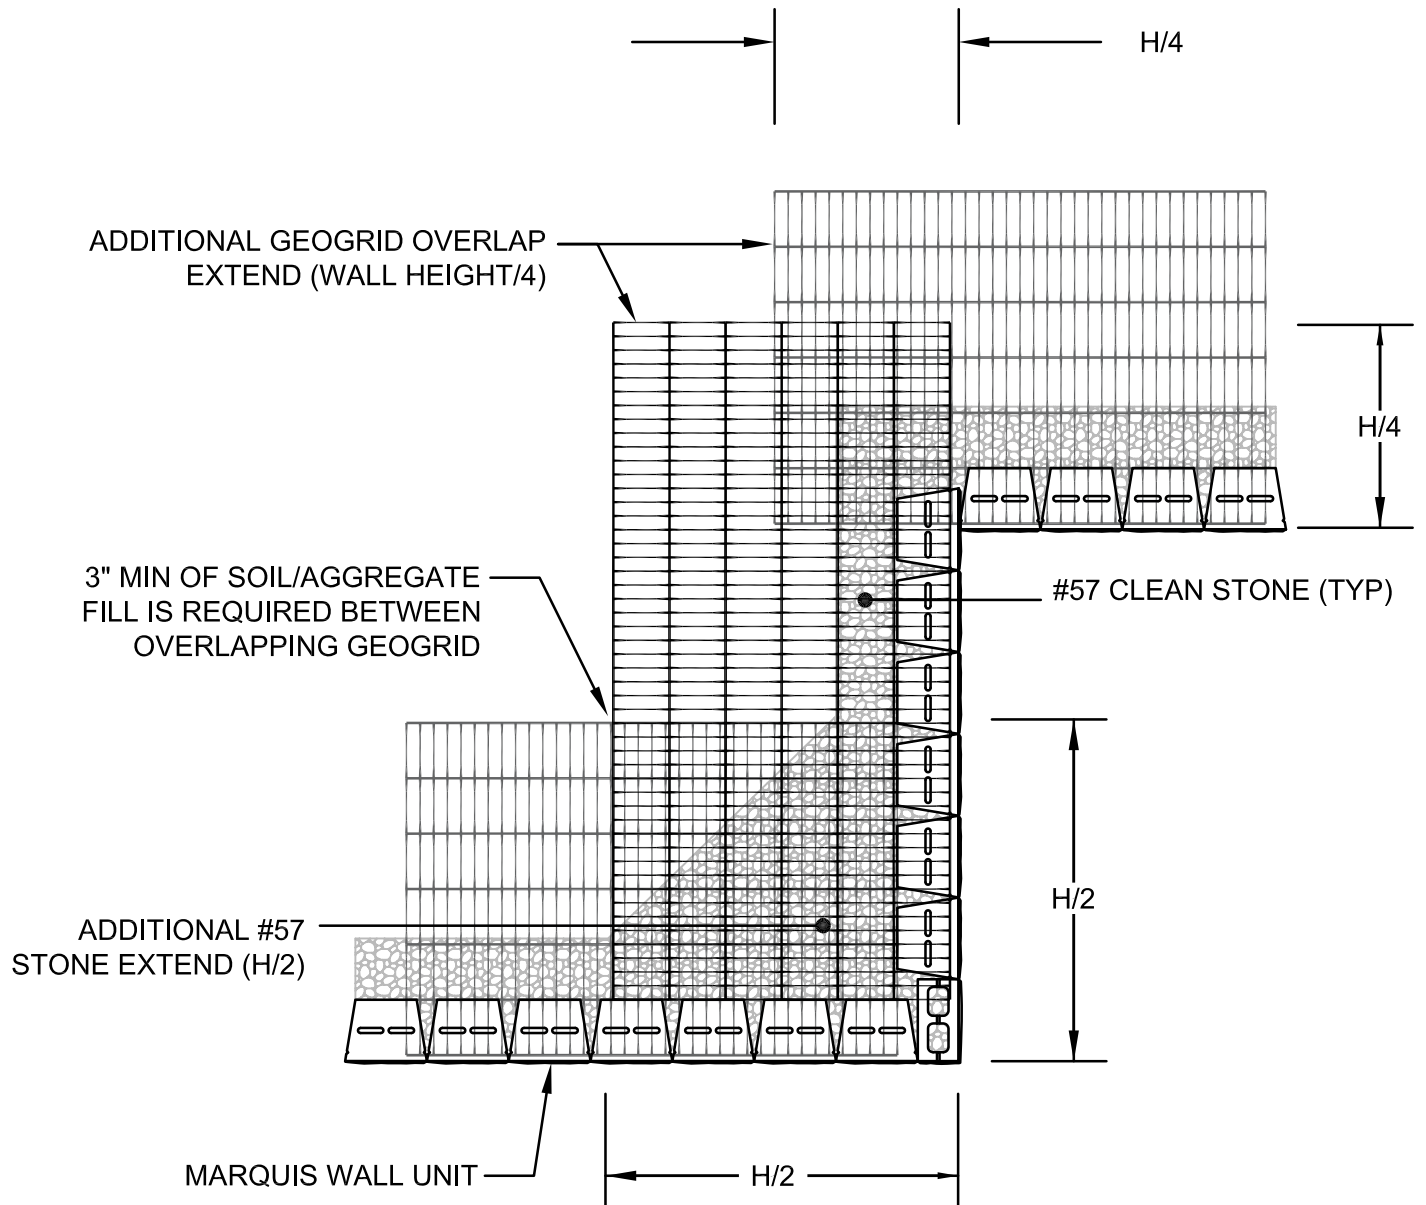

201 Park Ave.
Woodbury, NJ 08096
(800)-444-3679
www.ephenry.com

TITLE: MARQUIS WALL
GEOGRID INSTALLATION ON CORNERS DETAIL

SCALE: NOT TO SCALE